

**Quick Start Guide** 

Digital Vehicle-mounted Radio

Copyright © 2019 ZTE CORPORATION


### All rights reserved.


No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of 7TF CORPORATION

The manual is published by ZTE CORPORATION. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for your reference only. Please check the product model

# Set to Know Your Radio

# Device Overview

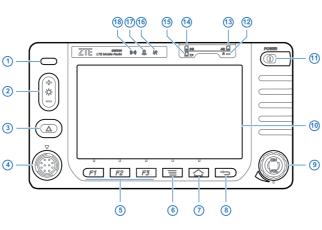

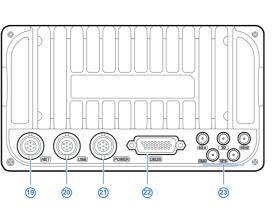

### Keys ports and Indicators

No.	Name	Description		
1	Power indicator	Lit after your GM65X is started.		
2	Screen brightness key	Increases and decreases the screen brightness.		
3	Emergency call key	Press this key to dial a preset emergency number.		
4	Mobile transceiver port	Connects to a mobile transceiver. A PTT voice or video call can be initiated or answered after a mobile transceiver is connected.		
5	F1~F3 keys	Opens a preset function screen directly.		
6	Menu key	Shows the menu of the displayed screen.		
7	Home key	Switches back to the home screen.		
8	Back key	Returns to the previous screen.		
		Turns up or down the volume:		
	Volume/Channel selection knob	After a call is connected, rotate this knob to adjust the call volume.		
		On a screen, rotate this knob to adjust the tone volume.		
9		When a video or audio file is being played, rotate this knob to adjust the media volume.		
		<ul> <li>Press this knob on the home screen to switch to the channel selection function, and rotate this knob to select a speed-dial group.</li> </ul>		
10	Touchscreen	Supports operations triggered by touch gestures.		
		<ul> <li>Press and hold this key to power on your GM65X.</li> </ul>		
11	Power key	<ul> <li>Press and hold this key to show the power- off options.</li> </ul>		
		<ul> <li>Press this key to switch your GM65X to sleep mode.</li> </ul>		
		<ul> <li>Press this key to wake up your GM65X.</li> </ul>		
12	Power down key	Press this key to directly power down your GM65X. Usually used when the device has lost response and cannot be normally powered off. To power on your GM65X again, press and hold		

### asic Operations

### Power-On/Power-Off/Sleep

- Press and hold the **Power** key to show the power-off menu, and select Power off to turn off your GM65X.
- Press the **Power** key to switch your GM65X to sleep mode or wake it

# Home Screen

Your GM65X shows the home screen (see the following figure) after being started and scans for the network automatically (if a valid SIM card is installed).

After accessing the network, your GM65X enters the standby status and is ready to use

Press the **Home** key on any screen to return to the home screen.



Perform one of the following operations on the home screen as needed:

- switch to another speed-dial group
- Tap the Contacts, PTT, or Message icon open the corresponding

- Press and hold the **Power** key to power on your GM65X.

• Tap the current speed-dial group to open the speed-dial group list, and then select a group as needed

- Tap the < or > icon to switch to another speed-dial group.
- Press the Volume/Channel selection knob, and rotate the knob to
- Drag the Status bar to the right to show notifications.

## **Status Icons**

Icon	Description	Icon	Description
*	Bluetooth device connected	?	No SIM card installed
*	Bluetooth device disconnected	$\mathcal{\vec{D}}$	Mute
윰	Ethernet network connected	<b>©</b>	Scanning
	PTT registration failed	<b>))</b> )	Speaking
4G 4G 4G	Cellular mobile network signal strength	<b></b>	USB connected
Ġŧ	Direct Mode Operation	(C) (C) (C) (C)	Wi-Fi network signal strength
•	GPS positioning	/i\	Prompt/alarm

### Note:

You can initiate or answer a voice or video PTT call only after a mobile transceiver is connected to your GM65X.

You can use the mobile transceiver to perform the following operations.

- Browse the function screens on your GM65X and access a function as needed.
- Dial a number or enter characters.

Connect a Mobile Transceiver

Initiate, answer, or end a common voice call.

corresponding keys on your GM65X

Initiate a voice or video PTT call.

To provide the above functions, the mobile transceiver has the following

· Android function keys Menu, Home, and Back keys that function the same as the

huania(LT)

ustria(AT)

Slovakia(SK)

Sweden(SE)

member states.

Declaration of Conformity

Cautions

- Navigation keys and OK key
- Up, Down, Left, and Right navigation keys and the OK key. Voice call function keys

equency Range (MHz)

467.4875-467.5875

therlands(NL) 410-430, 440-470

406.1-410. 413-418.6. 423-428.6. 440

450, 450-452.9875, 458.1125-462.9875,

417-420, 442-445, 456-460, 461.3-470

444.9-444.900001, 450-456, 457.33

448-449.5, 457-460, 467-470

457.330001, 457.45-458.3, 460-470

408-410.8, 415-420.8, 425-429.8, 440

450.55, 457.5-458.2, 460-460.55, 467.5

441.025-451.31, 455.73-461.31, 465.73

419.55625-419.71875, 420.0125-420.8875, 426.35-427.5, 427.525-427.9,

429 15-429 525, 429 55625-429 71875

440 89375 442 775-443 443 025-444

444.025-444.525, 444.55-444.975, 445-

446, 447 00625-447 29375, 447 30625-

447.70625, 449.025-449.525, 449.55-

452.975, 453.0125-453.6625, 469.725

406.1-430, 442-444, 444.5875-452.5, 457.5-462.5, 467.5-470

The product shall only be connected to a USB port of version

The device complies with RF specifications when the device is used at 40mm from your body.

Hereby, ZTE CORPORATION declares that this GM65X product is in

compliance with essential requirements and other relevant provision

of Directive 2014/53/EU.This product is allowed to be used in all EU

• The device operating temperature range is -30°C ~+60°C.

449.975. 450.325-452.475. 452.525

407.525-408.55, 410.0125-410.8875,

417.525-417.9, 419.15-419.525,

440.0125-440.5875, 440.60625-

Call/Answer and Hook keys.

# Use this key to switch a call from voice mode to video mode. PTT key Use this key to initiate a PTT call. Microphones One front microphone and one rear microphone. Initiate a Full Duplex Voice/Video Call 1. Press the Home key to switch back to the home screen.

Side key

Use this key to delete input characters.

Digit/letter keys, \* key, and # key

Use these keys to dial a number or enter characters.

- 2. Perform one of the following steps to select a contact or dial a
- Tap **Contacts > Contact**, and select a contact.
- Tap Contacts > Call History, and select a contact or phone
- Tap Contacts > Dial-pad, and enter a phone number.
- Use the digit keypad on the mobile transceiver to dial a phone
- 3. Tap On your GM65X or press the Call key on the mobile
- transceiver to initiate a voice call. To initiate a video call, press the **Side** key on the mobile transceiver, and then tap **O** on your GM65X or press the Call key on the mobile transceiver.
- 4. Tap a on your GM65X or press the **Hook** key on the mobile transceiver to end a call or stop dialing a number.

### Answer a Full Duplex Voice/Video Call

- 1. When your GM65X receives a call, tap O on your GM65X or press the **Answer** key on your mobile transceiver to answer the call.
- 2. Tap on your GM65X or press the **Hook** key on the mobile transceiver to end or reject a call.

# Basic PTT Operations

Keypad on the Mobile Transceiver

# Note:

To initiate a group PTT call, press the # key, and then enter the

Before initiating a video PTT call, verify that your GM65X is

1. Press the **Home** key to switch back to the home screen.

- or group number 3. Press the **Side** key on the mobile transceiver to switch the call from
- seconds, the call will be switched back to voice mode. 4. Press and hold the **PTT** key on the mobile transceiver, and speak
- 5. Release the **PTT** key on the mobile transceiver to release the floor to listen to the other party or become idle.

- 1. Press the **Home** key to switch back to the home screen.
- 3. Press the **Side** key on the mobile transceiver to switch the call from
- seconds, the call will be switched back to voice mode.
- to listen to the other party or become idle.

### Address Book

- 1. Press the **Home** key to switch back to the home screen.
- seconds, the call will be switched back to voice mode. 4. Press and hold the PTT key on the mobile transceiver, and speak
- after hearing a beep. . Release the PTT key on the mobile transceiver to release the floor

# Initiate a Half Duplex PTT Call

You can initiate a half duplex PTT call in one of the following ways:

- To initiate a private PTT call, enter the number directly.

### connected to a camera.

- 2. Use the keypad on the mobile transceiver to enter a private number
- voice mode to video mode. If there is no calling operation within 5
- Kevpad on Your GM65X

### 2. Tap **Contacts > Dial-pad**, and enter a private number or group to listen to the other party or become idle.

- voice mode to video mode. If there is no calling operation within 5 4. Press and hold the PTT key on the mobile transceiver, and speak
- after hearing a beep. 5. Release the PTT key on the mobile transceiver to release the floor

- Tap Contacts > Contact, and select a contact.
- 3. Press the **Side** key on the mobile transceiver to switch the call from voice mode to video mode. If there is no calling operation within 5
- to listen to the other party or become idle.

- 1. Press the **Home** key to switch back to the home screen.
- 3 Press the **Side** key on the mobile transceiver to switch the call from voice mode to video mode. If there is no calling operation within 5 seconds, the call will be switched back to voice mode.
- 4. Press and hold the PTT key on the mobile transceiver, and speak after hearing a beep.

- Tap the current speed-dial group to open the speed-dial group list, and then select a group as needed
- Press the Volume/Channel selection knob, and rotate the knob to switch to another speed-dial group.
- 3. Press the **Side** key on the mobile transceiver to switch the call from voice mode to video mode. If there is no calling operation within 5 seconds, the call will be switched back to voice mode.
- 4. Press and hold the  $\mbox{\bf PTT}$  key on the mobile transceiver, and speak after hearing a beep. 5. Release the **PTT** key on the mobile transceiver to release the floor

## Answer a Half Duplex PTT Call

Your GM65X emits a short beep when it receives a PTT call. You can hear the other party without any operation. After the other party releases the floor, you can press and hold the **PTT** key on the mobile transceiver and speak after hearing a beep. After releasing the PTT key on the mobile transceiver to release the floor, you can continue to hear the other party or become idle.

### End a Half Duplex PTT Call

- During a private call, tap the a icon.
- During a group call, the calling party can tap the icon to end the group call.

For the permissions of ending a PTT call, contact your network

### Options in a PTT Call Record Sound

Tap Contacts > Call History, and select a contact or number.

5. Release the PTT key on the mobile transceiver to release the floor

### to listen to the other party or become idle. PTT Speed-Dial Group

## 1. Press the **Home** key to switch back to the home screen.

- 2. Perform one of the following operations to select a speed-dial
- f Tap the < or > icon to switch to another speed-dial group

2. Tap PTT > Group. 3. Pull down and then release the list.

### During a voice or video PTT call, tap the (a) icon to record the call.

Take a Snapshot During a video PTT call, tap the 🔟 icon to take a snapshot of the

### Initiate a PTT Emergency Call

The PTT emergency calls have the highest priority. Before initiating an emergency call, you need to be authorized with the emergency call permission and input an emergency call number in the PTT

- Perform the following operations to initiate an emergency call: On the home screen, tap PTT > PTT Setup > Emergency call, set the Call types and Emergency number. The Call types can be set to Group voice call, Duplex voice call, or Duplex video call. The
- **Emergency number** can be set only after the call type is selected. 2. Press the **Emergency call** key to call the preset emergency number

### If the PTT scanning function is enabled, your GM65X can receive calls from the scanned groups only.

PTT Scanning

- Set the PTT Scanning Function 1. Press the **Home** key to switch back to the home screen.
- 2. Tap PTT > PTT Setup > Scan function 3. Select Disable scan, Scan all, or Scan partly. If Scan all is selected, you can receive calls from all groups.

# **Update PTT Groups**

Press the Home key to switch back to the home screen.

### PTT Settings 1. Press the **Home** key to switch back to the home screen.

2. Tap PTT > PTT Setup. You can make the following PTT settings.

### Cluster Activate or deactivate the PTT function.

A PTT call can be connected only after the PTT function is activated. Set the group scanning function to Disable scan, Scan all, or Scan partly.

### If Scan all is selected, you can receive calls from all groups.

Video Quality

Version Info

Emergency call Set the Call types and Emergency number.

The GM65Xs in DMO mode can be connected directly without accessing

Call types: set the emergency call to Group voice call, Duplex voice call, **Emergency number**: can be set only after the call type is selected.

### Set the video quality to Smooth, Normal or High. Switch to DMO

Check the software version of your GM65X.

More settinas Set the Group name.

Learn More

Specification

To learn about more information about your GM65X, visit the website

The maximum SAR of your GM65X is 0.174 W/Kg, complying with the GB21288-2007 standard , EN 50385.

4G SIM card slot Used for installing a 4G SIM card.

18 Wi-Fi indicator Lit when the Wi-Fi function is enabled.

15 microSD card slot Used for installing an external microSD card.

Lit or flashes when your GM65X is sending or

Lit when the GPS function is activated

Connects to a device with a USB port, for

Connects to a wired network

Connects to a power cable

Connects to accessories

Connects to RF antennas

14 3G SIM card slot Used for installing a 3G SIM card.

Data service

7 GPS indicator

USB Ports

1 Power Ports

ports

ports

Antenna

DB26 accessory

# **RF Specifications**

http://www.caltta.com.cn.

200111		Specification			
System		FDD-LTE, WCDMA/GSM (data only), and DMO			
		GM651	FDD 450M A(452.5~457.5MHz) FDD 450M C(450~455.7MHz)		
Frequency	LTE	GM652	TDD 1.9G(1880~1920MHz) TDD 2.3G(2300~2400MHz) TDD 2.6G(2496~2690MHz) TDD 1.8G(1785~1805MHz) TDD 1.4G(1447~1467MHz)		
		GM653	FDD 700M(B13/B14/B28) (777~787MHz/746~757MHz) (788~798MHz/758~768MHz) (703~748MHz/758~803MHz) FDD 800M (B5) (824~849MHz/ 869~894MHz)		
		GM654	TDD 340M (336~346MHz) (optional) TDD 450M (380~450MHz)		
		GM655	TDD 1.4G(1447~1467MHz) TDD 1.8G(1785~1805MHz)		
		GM656	TDD 600M (566~626MHz;606~678MHz)		
		DMO	400-470MHz		
Maximum Tx power		WCDMA:	50MHz,900MHz,1800MHz,1900MHz		

### Auxiliary Equipme

axillar y Equipments					
ame	Manufacturer	Model No.			
MO Antenna	Percsson Communication Equipment Co., Ltd	CS-400/470-5F3-LE			
/CDMA/LTE ntenna	Percsson Communication Equipment Co., Ltd	CS-G1/G2/C12-5F3-LE			
NSS Antenna	Percsson Communication Equipment Co., Ltd	CS-G5/C26/C27-5GP			
and licrophone	SHENZHEN VOXTECH CO., LTD	AA400			
ower Cable	UNITED WESTWIN ELECTRONIC CO., LTD	16AWG3C			

The authorized to set up the permitted frequency ranges for marketing

Country	Frequency Range (MHz)	Max. transmit power (W
Germany(DE)	406.1-430, 440-470	2
France (FR)	406.1-430, 444.5-447, 451.5-460, 461.5- 470	2
United Kingdom (UK)	410-430, 440-470	2
Italy(IT)	440-443, 445-470	2
Greece(EL)	406.1-430, 440-470	2
Spain(ES)	406.1-430, 440-470	2
Ireland (IE)	410-430, 440-455, 456-459, 460-470	2
Belgium(BE)	406.1-430, 440-470	2
Croatia (HR)	406.1-430, 440-470	2
Cyprus (CY)	406.1-430, 440-470	2
Portugal (PT)	440-470	2
Malta(MT)	406.1-430, 440-470	2
Luxembourg (LU)	410-430, 440-470	2
Bulgaria(BG)	410-430, 440-470	2
Latvia (LV)	406.1-430, 440-450, 456-470	2
Slovenia(SI)	406.1-430, 440-470	2
Czech Republic (CZ)	448-451.3, 457.38-461.3, 467.38-470	2
Denmark(DK)	406.1-430, 450-470	2
Estonia(EE)	406.1-410, 412.5-420, 422.5-430, 440- 442.5, 443-450, 446-446.2, 450-453,	2

## Frequency Ranges

Country	Frequency Range (MHz)	Max. transmit power (V
Germany(DE)	406.1-430, 440-470	2
France (FR)	406.1-430, 444.5-447, 451.5-460, 461.5- 470	2
United Kingdom (UK)	410-430, 440-470	2
Italy(IT)	440-443, 445-470	2
Greece(EL)	406.1-430, 440-470	2
Spain(ES)	406.1-430, 440-470	2
Ireland (IE)	410-430, 440-455, 456-459, 460-470	2
Belgium(BE)	406.1-430, 440-470	2
Croatia (HR)	406.1-430, 440-470	2
Cyprus (CY)	406.1-430, 440-470	2
Portugal (PT)	440-470	2
Malta(MT)	406.1-430, 440-470	2
Luxembourg (LU)	410-430, 440-470	2
Bulgaria(BG)	410-430, 440-470	2
Latvia (LV)	406.1-430, 440-450, 456-470	2
Slovenia(SI)	406.1-430, 440-470	2
Czech Republic (CZ)	448-451.3, 457.38-461.3, 467.38-470	2
Denmark(DK)	406.1-430, 450-470	2
Estonia(EE)	406.1-410, 412.5-420, 422.5-430, 440- 442.5, 443-450, 446-446.2, 450-453, 457.575-463, 467.575-470	2

iary Equipments				
е	Manufacturer	Model No.		
Antenna	Percsson Communication Equipment Co., Ltd	CS-400/470-5F3-LE		
MA/LTE nna	Percsson Communication Equipment Co., Ltd	CS-G1/G2/C12-5F3-LE		
S Antenna	Percsson Communication Equipment Co., Ltd	CS-G5/C26/C27-5GP		
l ophone	SHENZHEN VOXTECH CO., LTD	AA400		
Cabla	UNITED WESTWIN	16444636		

	,		
Country	Frequency Range (MHz)	Max. transmit power (W)	
Germany(DE)	406.1-430, 440-470	2	
France (FR)	406.1-430, 444.5-447, 451.5-460, 461.5- 470	2	
Jnited Kingdom UK)	410-430, 440-470	2	
taly(IT)	440-443, 445-470	2	
Greece(EL)	406.1-430, 440-470	2	
Spain(ES)	406.1-430, 440-470	2	
reland (IE)	410-430, 440-455, 456-459, 460-470	2	
Belgium(BE)	406.1-430, 440-470	2	
Croatia (HR)	406.1-430, 440-470	2	
Cyprus (CY)	406.1-430, 440-470	2	
Portugal (PT)	440-470	2	
Malta(MT)	406.1-430, 440-470	2	
uxembourg LU)	410-430, 440-470	2	
Bulgaria(BG)	410-430, 440-470	2	
atvia (LV)	406.1-430, 440-450, 456-470	2	
Slovenia(SI)	406.1-430, 440-470	2	
Czech Republic CZ)	448-451.3, 457.38-461.3, 467.38-470	2	
Denmark(DK)	406.1-430, 450-470	2	
	406.1-410, 412.5-420, 422.5-430, 440-		

limit requirement in SJ/T11363-2006.

updated with the technology development.

Toxic or Hazardous Substances or Elements

Parts	Toxic or Hazardous Substances or Elements						
Pai ts	Pb	Hg	Cd	Cr(VI)	PBB	PBDI	
LCD	0	0	0	0	0	0	
Mainboard	0	0	0	0	0	0	
Shell	0	0	0	0	0	0	
Accessories	0	0	0	0	0	0	

: Indicates that the toxic or hazardous substance contained in all of


least one of the homogeneous materials for this part is above the

- the homogeneous materials for this part is below the limit require ment in SJ/T11363-2006. Indicates that the toxic or hazardous substance contained in at
- Information about the substances contained in the product manufactured by ZTE CORPORATION should be continuously

× marked on this product indicates that there are currently

no alternative technologies or components. The product manufactured by ZTE CORPORATION is in compliance with the

"Administration on the Control of Pollution Caused by Electronic Information Products" published by People's Republic of China. ZTE CORPORATION reserves the final rights of explanation of the

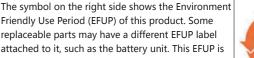

# Manufacturer Address

ZTE Plaza, Keji Road South, Hi-Tech Industrial Park, Nanshan District, Shenzhen, Guangdong Province 518057, P.R.China



valid only under the operating conditions listed in the operation manual of the product.